


3. Remove the axle holder nuts (3) and washers (4) from both sides then remove the front wheel.

NOTE:

- * Do not depress the brake lever when the wheel is off the motorcycle. The caliper piston will be forced out of the cylinder with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your authorized Honda dealer for this service.

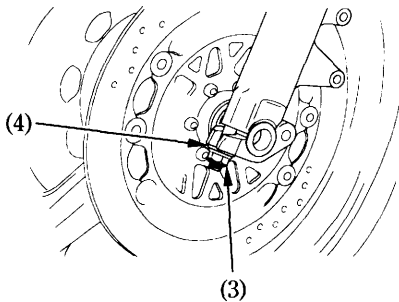

(3) Axle holder nut

(4) Washer

Installation Notes:

Set the axle in the axle holders.

Install the washer and axle holder nuts to specified torque.

Axle holder nut torque:

59 N·m (5.9 kg·m , 43 lb-ft)

Fit the caliper over the disc, taking care not to damage the brake pads. Install the caliper fixing bolts, and tighten to a torque of :

31 N·m (3.1 kg·m , 22 lb-ft)

CAUTION:

- * When installing the wheel, carefully fit the brake disc between the brake pads to avoid damaging the pads.