



### LEFT SIDE COVER


The left side cover must be removed for fuse maintenance, and to access the tool kit.

#### Removal:

1. Insert the ignition key (1) into the lock and turn it clockwise.
2. Carefully pull the side cover (2) out from the grommets (3).

#### Installation:

1. Align the prongs with the grommets.
2. Push the side cover while turning the ignition key clockwise.

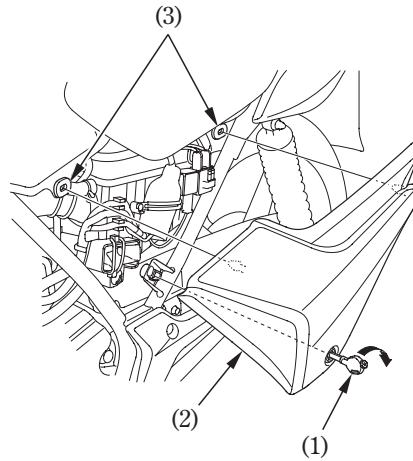

(1) Ignition key  
(2) Side cover

(3) Grommets

