



High Air Temperature

35°C (95°F) or above

1. Do not use the choke.
2. With the throttle 1/8–1/4 open, press the start button.

Low Air Temperature

10°C (50°F) or below

1. Follow steps 1 – 2 under “Normal Air Temperature.”
2. When engine speed begins to pick up, operate the choke lever to keep fast idle.
3. Continue warming up the engine until it runs smoothly and responds to the throttle, when the choke lever is at Fully OFF (B).

