




Position Light Bulb

(TU, IITU)


1. Remove the front cowl and disconnect the connector (page 109).
2. Pull the position light socket (1) and remove it.
3. Pull out the bulbs (2) without turning.
4. Install a new bulb in the reverse order of removal.

(U, IIU)

1. Remove the headlight (1) (page 110).
2. Pull the position light socket (2) and remove it.
3. Pull out the bulb (3) without turning.
4. Install a new bulb in the reverse order of removal.

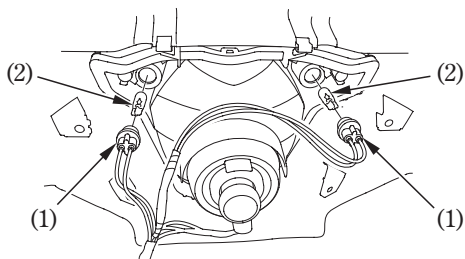

- (1) Socket
- (2) Bulbs

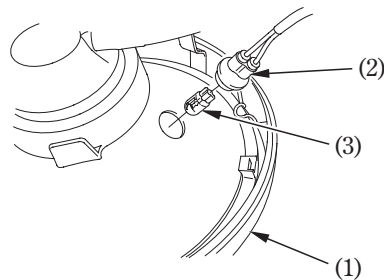

- (1) Headlight
- (2) Socket
- (3) Bulb

