


## SEAT

To remove the seat ( 1 ), insert the ignition key ( 2 ) into the helmet holder ( 3 ), turn it clockwise and pull the seat lock lever ( 4 ) downward. Pull the seat back and up.

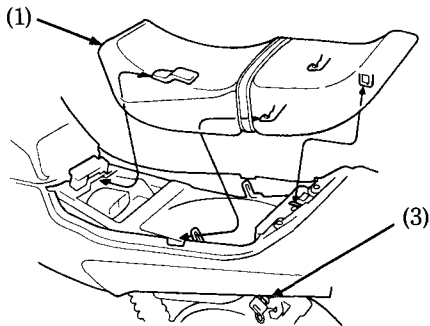


(1) Seat

(3) Helmet holder

To install the seat, insert the seat tab under the frame cross member and push down on the rear of the seat. Turn the key counterclockwise to lock the seat, then remove the key.

Lift the seat to make sure it is locked securely in position.

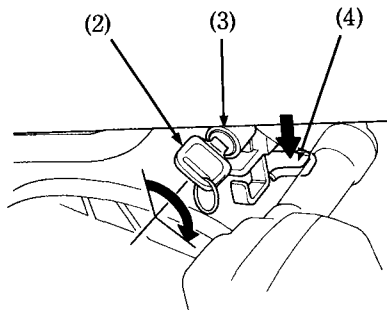

(2) Ignition key  
(3) Helmet holder

(4) Seat lock lever