


## Engine Will Not Start






### Starter Motor Operates But Engine Does Not Start

Check the following items:

- Check the correct engine starting sequence  P. 28
- Check that there is petrol in the fuel tank
- Check if the PGM-FI malfunction indicator lamp (MIL) is on
  - ▶ If the indicator light is on, contact your dealer as soon as possible.

### Starter Motor Does Not Operate

Check the following items:

- Make sure engine stop switch is  (Run) position  P. 26
- Check for a blown fuse  P. 90
- Check for a loose battery connection or battery terminal corrosion  P. 51
- Check the condition of the battery  P. 86

If the problem continues, have your motorcycle inspected by your dealer.