

- Care must be taken, as brake fluid will damage the paint finish and instrument lenses.


### Brake caliper adjustment:

Whenever the brake pads are replaced, the brake caliper must be adjusted. This adjustment is made in the following manner:

- Raise the front wheel off the ground by placing a support block under the engine.
- Loosen the caliper stopper bolt lock nut ①.
- Using a suitable screw driver, turn the stopper bolt ② in direction ③ until the friction pad contacts the brake disc. When the wheel is rotated, slight drag should be noticed.
- While rotating the front wheel, turn the stopper bolt in direction ④ until

the front wheel rotates freely.

- Turn the stopper bolt in direction ④ 1/2 turn further and tighten the lock nut.

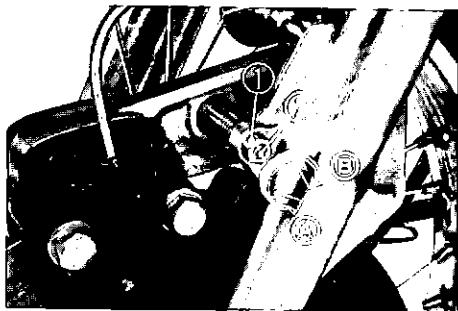

① Stopper bolt lock nut    ② Stopper bolt