

## 《CB360》

1. Raise the front wheel off the ground by placing a support under the engine.
2. Remove the cotter pin and disconnect the front brake cable from the brake arm.
3. Remove the speedometer cable set screw and disconnect the speedometer cable.
4. Unlock the lock washer and remove the front brake stopper arm bolt at the backing plate.
5. Remove the front axle holder nuts (two on each side), and remove the front axle holders (one on each side), and then the front wheel can be removed.
6. To install the front wheel assembly, reverse the removal procedure.

## Rear Wheel Removal

1. Remove the muffler.
2. Unscrew the rear brake adjusting nut, disassemble the brake rod from the brake stopper arm and disconnect the stopper arm from the backing plate.
3. Remove the cotter pin from the end of the axle.
4. Unscrew the rear axle nut and pull out the rear wheel axle. Tilt the motorcycle to one side so that the wheel can be removed.
5. To install the rear wheel, reverse the removal procedure.