


Stoplight Switch Adjustment

The stoplight switch adjustment is made at the stoplight switch ① located on the right side toward the rear of the engine.

1. First check the adjustment of the rear brake pedal in accordance with the procedure on page 62.
2. Turn on the main switch (red dot position).
3. Adjust the stoplight switch ① so that the stoplight will come on when the brake pedal is depressed to the point where the brake just starts to engage. If the stoplight switch is late in switching on the stoplight, turn the switch adjusting nut ② in direction ④ and if the stoplight comes on too early, turn the switch adjusting nut in direction ⑤.

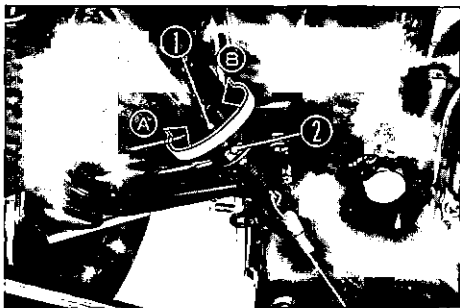

① Stoplight switch

② Adjusting nut