


Front suspension spring preload adjuster → P.69

Clutch lever → P.63

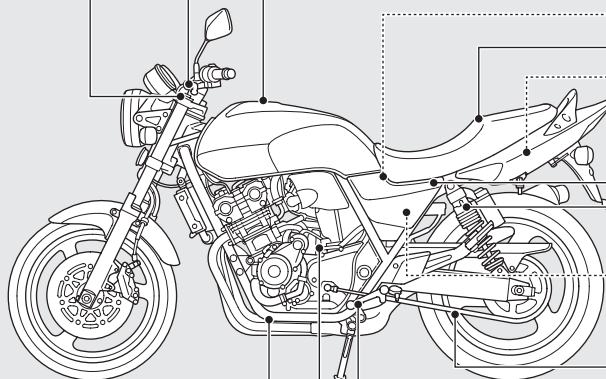

Fuel fill cap → P.24

Battery → P.47

Seat → P.45

Fuse box (CB400A) → P.91

Left side cover → P.46

Rear suspension spring preload adjuster → P.70

Fuse box → P.90

Main fuse → P.92

FI fuse → P.73

Drive chain → P.59

Shift lever → P.23

Side stand → P.58

Engine oil drain bolt → P.51

Crankcase breather → P.67