



Removing & Installing Body Components ► Battery

Battery

(CB400)

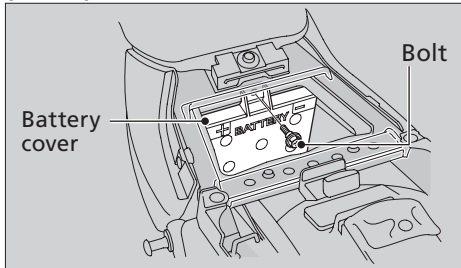

(CB400A)

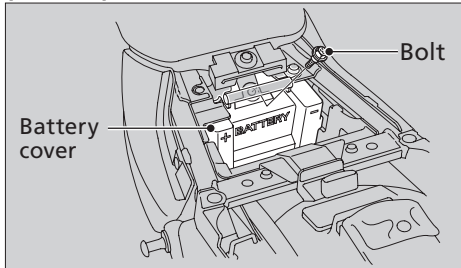

Removal

Make sure the ignition switch is OFF.

1. Remove the seat. ►P.45
2. Open the battery cover by removing the bolt.

Maintenance