



Other Adjustments

Adjusting the Brake Lever

You can adjust the distance between the tip of the brake lever and handle grip.

Maintenance

Adjustment method

Turn the adjuster until the index mark aligns with the arrow while pushing the lever forward in the desired position.

After adjustment, check that the lever operates correctly before riding.

NOTICE

- Do not turn the adjuster beyond its natural limit.

