


Other Adjustments ► Adjusting the Rear Suspension

Adjusting the Rear Suspension

Spring Preload

You can adjust the spring preload by the adjuster to suit the load or the road surface. Use the pin spanner and extension bar to turn the adjuster. Position 1 to 2 are for a decrease spring preload (soft), or turn the position 4 to 5 increase spring preload (hard). The standard position is 3.

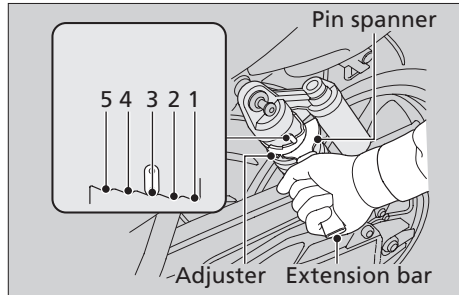

Attempting to adjust directly from 1 to 5 or 5 to 1 may damage the shock absorber.

NOTICE

Adjust both left and right shock absorbers to the same spring preload.

NOTICE

The rear shock absorber damper unit contains high pressure nitrogen gas. Do not attempt to disassemble, service, or improperly dispose of the damper. See your dealer.