


Reserve fuel consumption meter

When the 1st (E) segment of the fuel gauge starts flashing, the odometer & tripmeter & fuel mileage meter & fuel consumption meter switches to the reserve fuel consumption. You should refill the tank as soon as possible.

Reserve fuel consumption meter

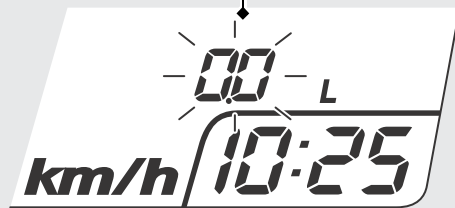

- Flashes from "0.0" L (litre) or gal (US gal).
 - ▶ When the amount of consumed fuel is more than 1.0 litre (0.26 US gal, 0.22 Imp gal) the display blinks faster.
 - ▶ If you change the display to odometer, tripmeter, fuel mileage meter and fuel consumption meter and so on **➡ P.22**, it will automatically return to the reserve fuel consumption display if the buttons are not pressed after for about 10 seconds.

After refuelling more than the reserve amount, the display returns to normal when your motorcycle travel 0.1 km (0.06 mile).