

In addition, to move the ordinary display at display setting.

 
- The button is not pressed for about 30 seconds
- Turn the ignition switch off and then on

### 1 To set the clock:


- 1 Turn the ignition switch to ON.
- 2 Press and hold SEL button and SET button until the hour digits start flashing.
- 3 Press SEL button until the desired hour is displayed.  
▶ Press and hold to advance the hour fast.



- 4 Press SET button. The minute digits start flashing.



 - 5 Press SEL button until the desired minute is displayed.  
▶ Press and hold to advance the minute fast.



- 6 Press SET button. The clock is set, and then the display moves to the backlight brightness adjustment.