



HISS indicator ➡P.26 ➡P.106

- Comes on briefly when the ignition switch is turned on. Goes off if the ignition key has the correct coding.
- Flashes every 2 seconds for 24 hours when the ignition switch is turned off.

➡ **Right turn signal indicator**

☰ **High beam indicator**

N **Neutral indicator**

Comes on when the transmission is in Neutral.