

- ① Tachometer    ①-a Tachometer RED zone    ② Speedometer    ③ Odometer  
 ④ Trip-meter    ④-a Trip-meter reset knob    ⑤ High beam indicator lamp    ⑥ Turn  
 signal indicator lamp    ⑦ Oil pressure warning lamp    ⑧ Neutral indicator lamp

Ref. No.	Description	Function
1	Tachometer	Indicates engine operating rpm.
1-a	Tachometer Red Zone	Indicates critical engine operating range. To avoid over-stressing engine components the tachometer needle must NEVER be permitted to enter the RED ZONE.
2	Speedometer	Indicates the riding speed.
3	Odometer	Indicates the total accumulated travelled distance.
4	Trip-meter	Indicates the distance travelled since meter resetting.
4-a	Trip-meter reset knob	Reset knob for "Zeroing" the trip-meter. Turn in direction of the arrow.
5	High beam indicator lamp (red)	Lamp will be ON when the headlight is on high beam.