

## IGNITION SWITCH

The three position ignition switch ① is located on top of the right handle grip switch housing. In the "ON" position (center) the ignition circuit will be completed and engine can be started.

In the "OFF" position (either side of center) the ignition circuit will be open and the engine will not operate.

This switch is intended primarily as a safety or emergency switch. When parking the motorcycle the main switch should always be turned to the "OFF" or parking position and the key removed.

## STARTER SWITCH

This is a push button switch ② located directly below the headlight control switch ③. While the starter switch is depressed the starter motor will crank the engine. Refer to the section on STARTING THE ENGINE (Page 28) for the correct starting procedure.

---

## HEADLIGHT (CONTROL) SWITCH

The click type, sliding switch ③ is located on the right handle grip switch housing. It can be operated without taking the hand off the handle grip. The red dot is the "OFF" position (headlight and tail light off). "L" is the low beam position (low beam light and tail light on). "H" is the high beam position (high beam light and tail light on). The headlight will only operate when the main