

① Steering lock

SEAT LOCK

The seat lock ① is located at the right center of bottom side. To raise the seat, insert the key into the seat lock and turn it counterclockwise.

NOTE:

The seat lock is of 2-stage. To lock, push down the seat to make sure seat is locked properly.


Document Box

The document box ② is located under the seat.

Put owner's manual and other documents in vinyl sack and contain them in document box.

NOTE:

When washing your motorcycle, be careful not to direct a blast of water from bottom side of seat.

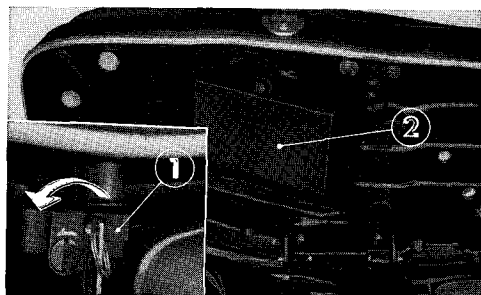

① Seat lock

② Document box