


HELMET HOLDER

Two helmet holders ① are located under the seat. To hang helmets, raise the seat, hang helmets and push down the seat.

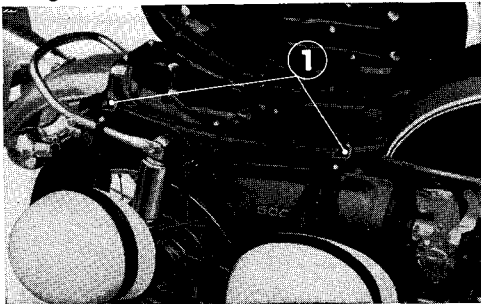

① Helmet holder

FRONT BRAKE (CONTROL) LEVER

The brake lever ① is located at the right handle bar grip. Application of the front brake is effected by squeezing the lever with a force proportional to the braking effort required.

NOTE:

If lever free play is excessive, see page 58 for inspection and servicing information.

THROTTLE GRIP

Throttle control is incorporated in the right handle bar grip ②. Twisting the throttle grip inward Ⓐ opens the throttle and increases the engine speed twisting the grip outward Ⓑ will close the throttle. As the throttle grip is closed all the way, a resistance will be felt. At this point the engine speed should drop to idling (1,000 rpm); if not, twist grip further into the overriding stroke. If the engine does not drop to the idle speed, the throttle control should be adjusted by referring to the section on THROTTLE CABLE and CARBURETOR ADJUSTMENT on page 51.