

ENGINE OIL

1. Changing Oil and Oil Filter Element


Engine oil is the chief factor affecting the performance and service life of the engine. Therefore the oil recommended on page 26 should be used and always maintained at the proper level. Further the oil and oil filter should be changed according to the schedule shown on page 35. Perform the engine oil change in the following manner.

Drain the oil while the engine is still warm, as this will assure complete and rapid draining saving much time.

- a. Place an empty vessel of adequate size under the crankcase to catch the oil. Remove the drain plug ① with a 17 mm wrench and drain the oil. Also

remove the oil filter bolt ② and the filter element.

- b. After the oil has been drained from the crankcase, operate the kickstarter pedal several times to drain all residual oil

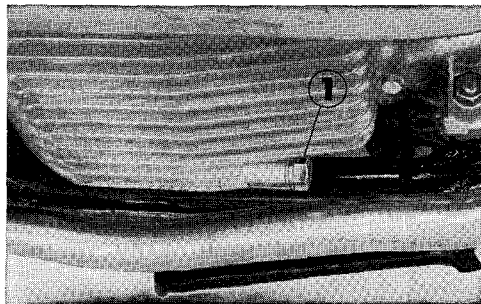

① Crankcase drain plug