

the inside of the element as shown in the illustration.


- c. When ready to install the air cleaner, assemble in the reverse order steps "b" and "a".

### THROTTLE CABLE ADJUSTMENT


Two control cables connect the throttle grip to a crank on the carburetor operating bar. One cable opens the throttle

valves, while the other cable ensures positive closure.

Standard throttle grip play is approximately 10–15° of grip rotation. This play can be adjusted at the grip play adjuster ② and also with the adjusters ③ at the lower end of the cables at the throttle crank ④. To adjust, loosen the lock nut and turn the adjuster. When performing the adjustment, both the opening and

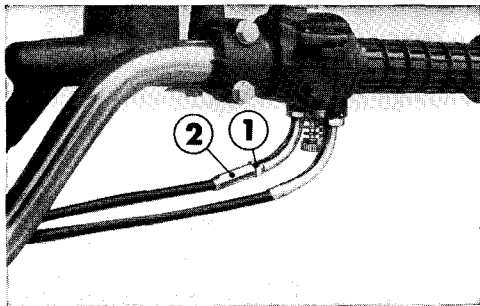

① Lock nut    ② Grip play adjuster

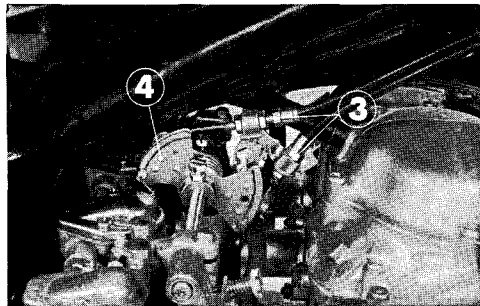

③ Adjusters    ④ Throttle crank