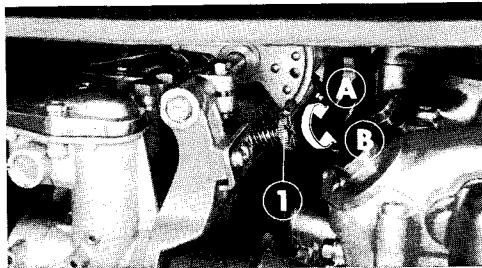

NOTE:

The carburetors were synchronized at the factory and should normally not require adjustment except when they have been disassembled.

To synchronize the carburetor will require special instrumentation and should be referred to an authorized dealer.



- ① Stop screw
- Ⓐ Increase the speed
- Ⓑ Decrease the speed

CLUTCH ADJUSTMENT

The clutch must be adjusted so that the engine can be completely disengaged from the transmission, but not to the point where the clutch will slip when the machine is accelerating.

The clutch and clutch cable should be adjusted to provide 0.4–1.0 in. (10–25 mm) free play measured at the tip of the clutch lever.