

the inside clearance between the face of the caliper housing and the brake disc by pressing the inner housing toward the disc. If clearance is less than 0.12 in. (3.0 mm), replace both pads with a new set.


NOTE:

Use only HONDA genuine replacement friction pads offered by authorized HONDA dealers. When service is necessary on the brakes, consult your HONDA dealer.

6. Rear Brake Adjustment

The rear brake is of an internally expanding type. To check the rear brake pedal ① free travel, raise the rear wheel off the ground by placing the motorcycle on the center stand. Rotate the wheel by hand and note the distance the pedal tip travels ② before the brake takes hold. Normal free travel is approximately 1 in. (25 mm). If adjustment is necessary,

make the adjustment by turning the adjusting nut ⑤. Turn clockwise for less free travel, counterclockwise for greater free travel. The stopper bolt ③ is provided to make an adjustment of the pedal height before the adjustment by the nut. To turn this bolt, loosen the lock nut. Upon adjusting, tighten the lock nut.

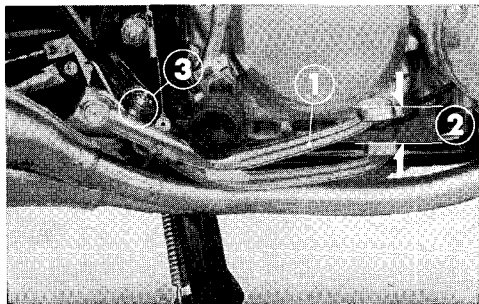

- ① Rear brake pedal ② pedal travel
③ Pedal stopper bolt