



ust by loosening the lock nut ② and screwing the stop light switch ③ up or down. Tighten the lock nut after adjustment.

- d. The stop light switch ③ on the front brake is also checked in the same manner by raising the front wheel off the

ground. However, the pressure switch cannot be adjusted and must be replaced. After replacing the switch, bleed the front brake system in accordance with procedure on page 59.

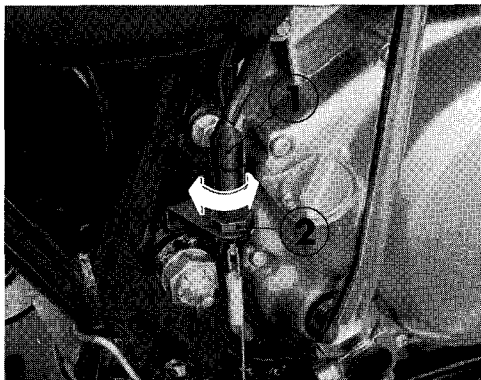

① Stop light switch (rear) ② Adjusting nut

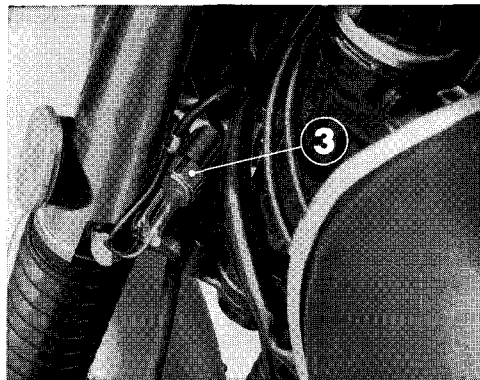

③ Stop light switch (front)