


FUEL AND OIL

Fuel Valve

The fuel valve (1) is mounted under the left side of the fuel tank.

“OFF” position:

When the fuel valve is turned to the “OFF” position, fuel cannot flow from the fuel tank to the carburetors. Set the valve in this position whenever the motorcycle is not in use.

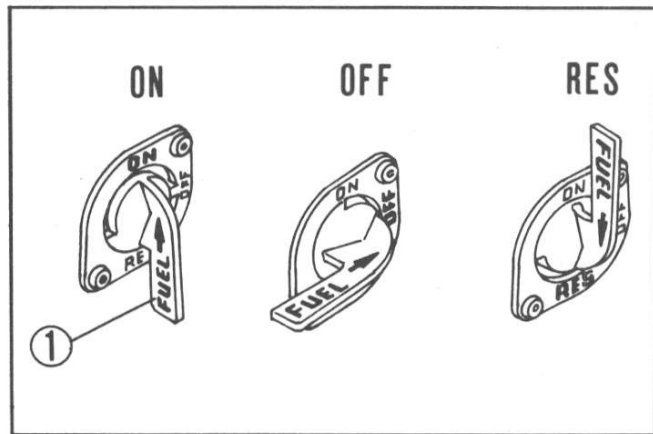

(1) Fuel valve

“ON” position:

When the fuel valve is turned to the “ON” position, fuel will flow from the main fuel supply to the carburetors.

Set the valve in this position when the engine is to be operated from the main fuel supply.

“RES” position:

When the fuel valve is turned to the “RES” position, fuel will flow from the reserve fuel supply to the carburetors.

The fuel valve should be set in this position only after the main fuel supply has been consumed. The reserve fuel supply is approximately 4.5ℓ (1.2 U.S. gal.).

Switching to the reserve fuel supply serves as a warning to the rider that it is time to refill the fuel tank.

NOTE: Do not operate the machine with the fuel valve in the reserve position after refueling, or you will defeat the purpose of the reserve fuel supply.