


3. After draining the oil tank and the crankcase, operate the kick starter pedal several times to force out all residual oil remaining in the oil system passages.
4. When the oil has been completely drained, reinstall the crankcase and oil tank drain plugs, making sure that the drain plug seals are in good condition.

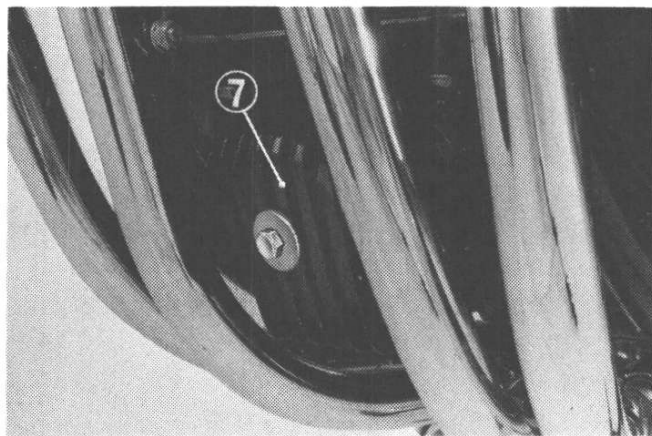

(7) Oil filter cover

5. Install the oil filter element and tighten the filter cover making sure the cover seal is in good condition. At the 1,000 km (500 miles) service remove and discard the original oil filter element and install a new filter element. Thereafter, it is recommended that a new filter element be installed at every 5,000 km (3,000 miles) or 6 months.
6. Fill the oil tank with approximately 2.0ℓ (2.1 U.S. quarts) of recommended grade oil. Start the engine and operate for a few minutes. Stop the engine, refill the oil tank with oil while checking the oil level with the filler cap dipstick. Run the engine for a few minutes, then stop the engine and check the oil level refer to engine oil level checking instructions (page 39).

#### **CAUTION:**

- \* Do not operate the motorcycle if the oil level is below the lower oil level mark (4) on the dipstick. (page 39).