


## FUSE REPLACEMENT

(Refer to the maintenance precautions on page 51).

The main fuse (1), located on the starter magnetic switch (2) below the seat, is 30 A.

The spare main fuse (6) is located near the fuse box. The fuse box (4) is also located below the seat.

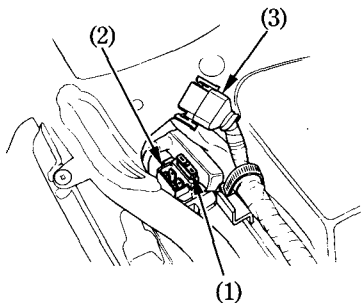


- (1) Main fuse      (2) Starter magnetic switch  
(3) Wire coupler

When frequent fuse failure occurs, it usually indicates a short circuit or an overload in the electrical system. See your authorized Honda dealer for repair.

### CAUTION:

**\* Turn the ignition switch OFF before checking or replacing fuses to prevent accidental short-circuiting.**

To replace the main fuse (1), remove the right side cover (page 33), disconnect the wire coupler (3) and remove the old fuse. Install a new fuse and reconnect the wire coupler.

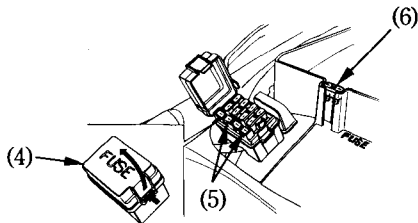

- (4) Fuse box      (5) Spare fuses  
(6) Spare main fuse