


To replace fuses in the fuse box (4), remove the the fuse box cover.

The spare fuses (5) are located in the fuse box.

Pull the old fuse out of the clips. Push a new fuse into the clips and install the fuse box cover.

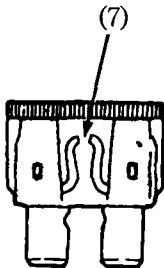

(7) Blown fuse

**▲WARNING**

**\* Never use a fuse with a different rating from that specified. Serious damage to the electrical system or a fire may result, causing a dangerous loss of lights or engine power.**