


## WHEEL REMOVAL

(Refer to the maintenance precautions on page 51).

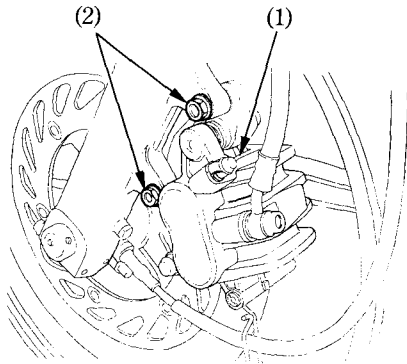


- (1) Brake caliper assembly
- (2) Fixing bolts

## Front Wheel Removal

1. Raise the front wheel off the ground by placing a support block under the engine.
2. Remove the left caliper assembly (1) from the fork leg by removing the fixing bolts (2).

### CAUTION:

**\*To avoid damage to the brake hose, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.**

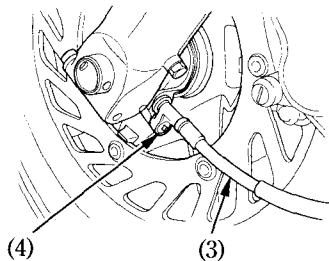

- (3) Speedometer cable
- (4) Cable set screw