



## ■ SERIAL NUMBER LOCATION

The frame serial number ① is stamped on the left of the steering head, and the engine serial number ② is located on top of the left side upper crankcase. These numbers are required when registering the

motorcycle. Refer to the frame or engine serial number when ordering replacement parts to ensure that you will obtain the correct parts for your model series.

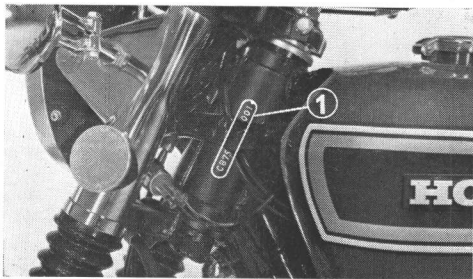

① Frame serial number

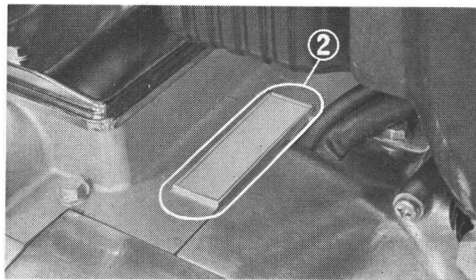

② Engine serial number