


and install a new filter element. Thereafter, it is recommended that a new filter element be installed at every 3,000 miles or 6 months.

- e. Fill the oil tank with approximately 3 quarts of premium quality, **SE, SAE 10 W-40** oil. Start the engine and operate for several minutes. Stop the engine and check the oil level with the filler cap dipstick ⑤.

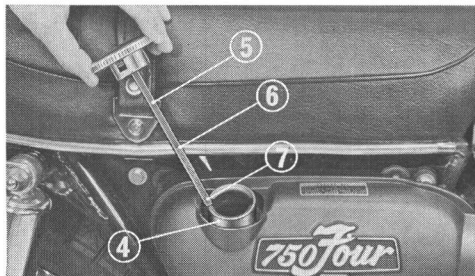

④ Oil tank

⑤ Filler cap dipstick

⑥ Upper level mark

⑦ Lower level mark

#### CAUTION:

- (1) Do not operate the motorcycle if the oil level is below the lower oil level mark ⑦ on the dipstick.
- (2) Do not overfill. Overfilling the tank will cause oil to be discharged out of the breather system.
- (3) When operating the motorcycle in unusually dusty conditions, oil changes must be performed at more frequent intervals than that which is specified in the maintenance schedule.
- (4) If the motorcycle is going to be stored for an extended period, the oil should be changed prior to storage.

The oil change interval for your HONDA engine is based on the use of oils that meet the requirements indicated in the section OIL RECOMMENDATION on page 23. Oil change intervals longer than those listed in the MAINTENANCE SCHEDULE will result in serious reductions in engine life and may affect HONDA obligation