
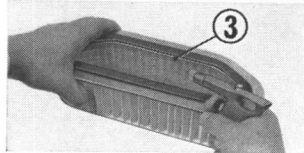


● Air Cleaner

Air cleaner element cleaning and/or replacement depends on the motorcycle operating conditions. Your HONDA dealer can help you to determine the frequency of cleaning or replacing the element.

- a. Remove the air cleaner lower case ① by loosening the wing nuts ②.
- b. Remove the air cleaner element ③ and clean it by tapping lightly to loosen dust. The remaining dust can be brushed from the outer element surface with a soft brush or blown away with compressed air from the inside of the element as shown in the illustration.
- c. If carburetor adjustment is to be made, the air cleaner upper case ④ is removed by loosening the four air cleaner hose clamp screws ⑤ and removing the mounting bolts. Push down and pull back on the upper case to remove from the carburetors.
- d. When ready to install the air cleaner, assemble in the reverse order steps c, b and a.

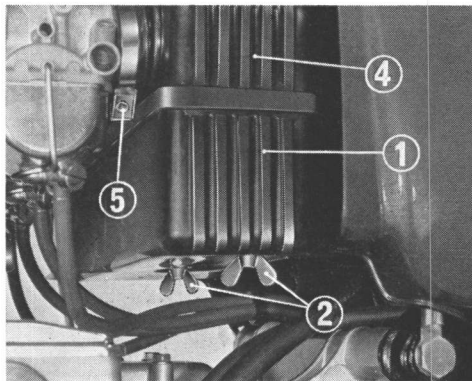

- ① Air cleaner lower case
- ② Wing nut
- ③ Air cleaner element
- ④ Air cleaner upper case
- ⑤ Air cleaner hose clamp screw