

SIDE COVER

The right side cover must be removed for the battery maintenance. The left side cover must be removed for air cleaner maintenance.


The right and left side covers can be removed in the same manner.

Removal:

1. Remove the seat (page 53).
2. Remove the bolt (1).
3. Remove the prong (2) from the grommet (3).
4. Pull the tab (4) out from the fuel tank rib (5) and remove the side cover (6).

Installation:

- Installation can be done in the reverse order of removal.

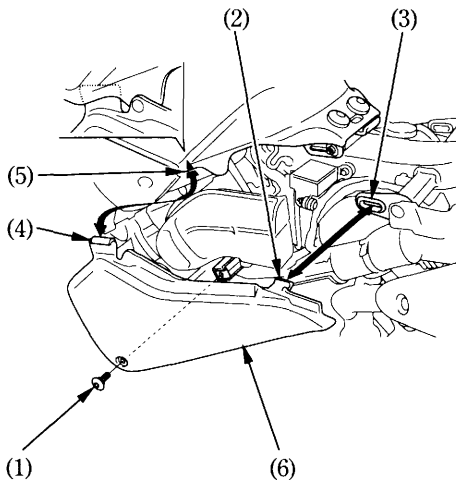

- | | |
|-------------|-------------------|
| (1) Bolt | (4) Tab |
| (2) Prong | (5) Fuel tank rib |
| (3) Grommet | (6) Side cover |