

Do not open the throttle when starting the engine with the choke ON. This will lean the mixture, resulting in hard starting.

**NOTICE**

Operating the engine with insufficient oil pressure can cause serious engine damage.

3. About a quarter minute after the engine starts, push the choke knob (1) in all the way to Fully OFF (B).
4. If idling is unstable, open the throttle slightly.

The engine will not start if the throttle is fully open (because the electronic control module cuts off the fuel supply).

High Air Temperature

35°C (95°F) or above

1. Do not use the choke.
2. Start the engine.

The radiator cooling fan may start to rotate when the choke knob is pulled out with the engine heated, but this is normal. As this takes place, check that the choke knob is returned completely.