


WHEEL REMOVAL

Refer to the Safety Precautions on page 73.

Front Wheel Removal

1. Raise the *front wheel* off the ground by placing a support block under the engine.
2. Remove the left caliper assembly (1) from the fork leg by removing the fixing bolts (2).
3. Remove the right caliper assembly proceeding as described for the left caliper and taking care not to damage the ABS sensor, if present. (CBF1000A)

To avoid damage to the brake hose, support the caliper assembly so that it doesn't hang from the hose. Do not twist the brake hose.

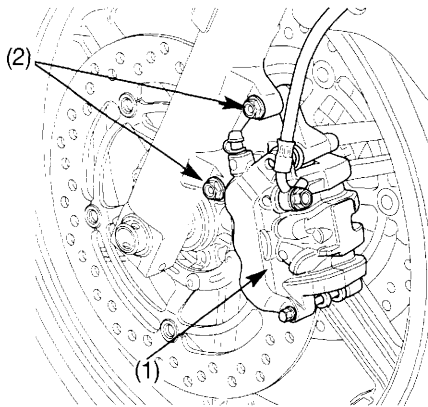

- (1) Brake caliper assembly
(2) Fixing bolts