

SEAT

The seat must be removed for air cleaner maintenance, to remove the left side cover, or to access the tool kit and owner's manual.


Removal:

1. Insert the ignition key (1) into the seat lock (2) and turn it clockwise.
2. Pull the seat lock lever (3) downward to unlock the seat.
Pull the seat (4) back and up.

Installation:

1. Insert the front prong (5) into the front stay (6) and the rear prongs (7) into the rear stays (8) on the frame.
2. Push forward and then down on the rear of the seat.

Be sure the seat is locked securely in position after installation.

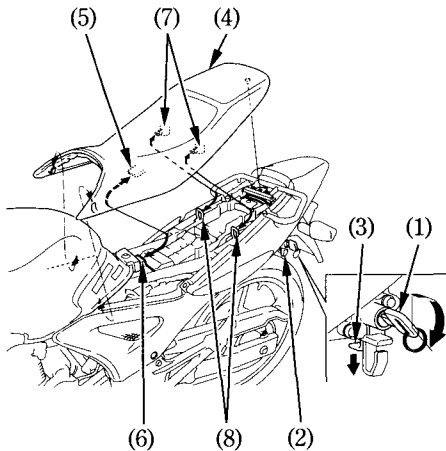

- | | |
|---------------------|-----------------|
| (1) Ignition key | (5) Front prong |
| (2) Seat lock | (6) Front stay |
| (3) Seat lock lever | (7) Rear prongs |
| (4) Seat | (8) Rear stays |