



3. Loosen the axle pinch bolt (3).
4. Remove the front axle nut (4).
5. Remove the front axle shaft (5), front wheel and side collar.

Do not depress the brake lever when the wheel is off the motorcycle. The caliper pistons will be forced out of the cylinders with subsequent loss of brake fluid. If this occurs, servicing of the brake system will be necessary. See your Honda dealer for this service.

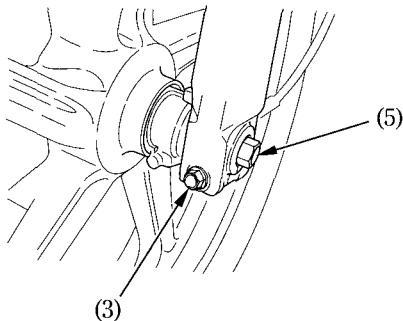

- (3) Axle pinch bolt  
(5) Front axle shaft

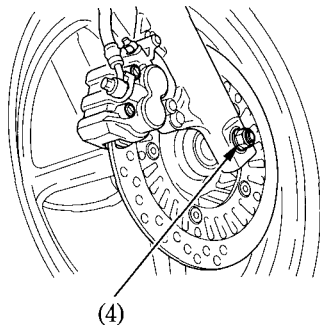

- (4) Front axle nut