

Installation:

Install the side collar into the right side wheel hub.

1. Position the wheel between the fork legs and insert the front axle shaft from the left side, through the left fork leg and wheel hub.

To avoid damaging the brake pads while installing the wheel, carefully fit the brake disc between the pads.

2. Make sure that the lug (6) on the left fork leg is contacting the lug (7) on the speedometer gear box.
3. Tighten the front axle nut to the specified torque.

Front axle nut torque:

59 N·m (6.0 kgf·m , 44 lbf·ft)


4. Tighten the axle pinch bolt on the left fork leg to the specified torque.

Axle pinch bolt torque:

22 N·m (2.2 kgf·m , 16 lbf·ft)

If a torque wrench was not used for installation, see your Honda dealer as soon as possible to verify proper assembly. Improper assembly may lead to loss of braking capacity.

5. Install the speedometer cable and tighten the screw securely.

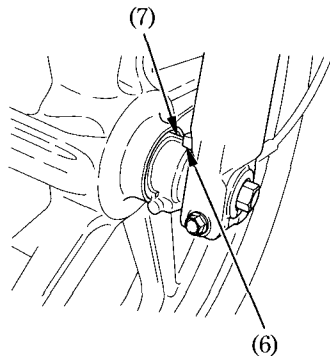

(6) Lug

(7) Lug