SPARK PLUG

Refer to the Safety Precautions on page 64. Recommended plugs: Normal:

CR8EH-9S (NGK) or U27FER9S DENSO

NOTICE

Never use a spark plug with an improper heat range. Severe engine damage could result.

Removal of the spark plugs

- 1. Disconnect the spark plug caps from the spark plugs.
- 2. Clean any dirt from around the spark plug bases. Remove the spark plugs using the spark plug wrench (1) furnished in the tool kit.



(1) Spark plug wrench