


AIR CLEANER

Refer to the maintenance precautions on page 64.

The air cleaner should be serviced at regular intervals (page 66). Service more frequently when riding in unusually wet or dusty areas.

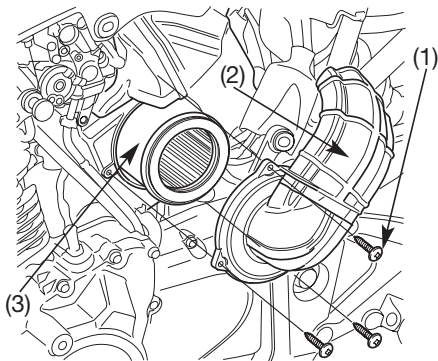

- (1) Attaching screws
- (2) Air cleaner duct
- (3) Air cleaner element

1. Remove the left side cover (page 47).
2. Remove the attaching screws(1) and air cleaner duct (2).
3. Pull out the air cleaner (3) and clean the air cleaner using compressed air from the inside, or replace it if necessary.
4. Install a new air cleaner.

Use the Honda genuine air cleaner or an equivalent air cleaner specified for your model.

Using the wrong Honda air cleaner or a non-Honda air cleaner which is not of equivalent quality may cause premature engine wear or performance problems.

5. Install the removed parts in reverse order of removal.