


Main fuse:

The main fuse (1) is behind the right side cover on the metal battery holder bracket.

The fuses specified are as follows:

30A fuse.

1. Remove the rider seat (page 44).
2. Remove the right side cover (page 47).
3. Disconnect the magnetic starter switch (4) connector (3).
4. Extract the fuse. If the fuse is burnt out, fit a replacement. The spare main fuse (5) is located under magnetic starter switch (4).
5. Reconnect the connector and replace the right side cover.

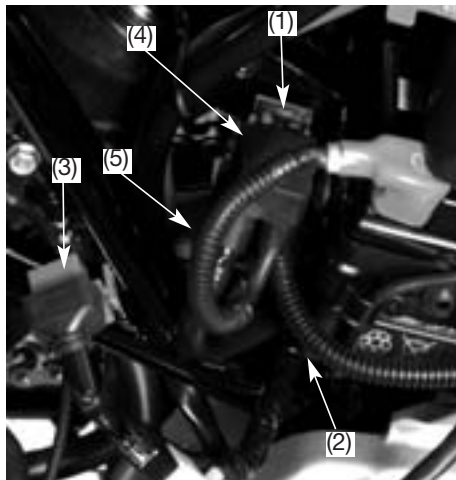

- (1) Main fuse
- (2) Metal battery holder bracket
- (3) Connector
- (4) Starter motor magnetic switch
- (5) Spare fuse