

MAJOR COMPONENTS (Information you need to operate this motorcycle)

⚠ WARNING

- * If the Pre-ride Inspection (page 40) is not performed, severe personal injury or vehicle damage may result.

SUSPENSION

Rear Suspension


The rear suspension can provide the desired ride under various rider/passenger weight and riding conditions through adjustments of the damping and spring preload adjusters.

Damping force adjustment:

The damping force adjuster (1) is located behind the right muffler protector.

To reduce damping force:
turn the adjuster clockwise.

To increase damping force:
turn adjuster counterclockwise.

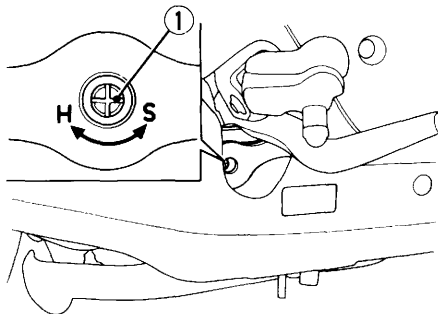

(1) Damping force
adjuster