## **MAINTENANCE**

| Page | :                         | page | 9                           |
|------|---------------------------|------|-----------------------------|
| 53 M | IAINTENANCE               | 88   | Brake Pad Wear              |
| 54   | Maintenance Schedule      | 90   | Brake System Inspection     |
| 57   | Tool Kit                  | 91   | Battery                     |
| 58   | Serial Numbers            | 94   | Fuse Replacement            |
| 59   | Colour Label              | 96   | Stoplight Switch Adjustment |
| 60   | Maintenance Precautions   | 97   | Bulb Replacement            |
| 61   | Air Cleaner               |      |                             |
| 63   | Crankcase Breather        | 103  | CLEANING                    |
| 64   | Engine Oil                |      |                             |
| 68   | Spark Plugs               | 105  | STORAGE GUIDE               |
| 71   | Throttle Operation        | 105  | Storage                     |
| 72   | Idle Speed                | 106  | Removal from Storage        |
| 73   | Drive Chain               |      |                             |
| 78   | Drive Chain Slider        | 107  | SPECIFICATIONS              |
| 78   | Front and Rear Suspension |      |                             |
| 79   | Side Stand                | 111  | NOISE CONTROL SYSTEM        |
| 80   | Wheel Removal             |      | (AUSTRALIA ONLY)            |
|      |                           |      |                             |