


## Preparation

Before starting, insert the key, turn the ignition switch ON and confirm the following:

- The transmission is in NEUTRAL (neutral indicator light ON).
- The engine stop switch is at  (RUN).
- The red malfunction indicator (MIL) is ON.
- The low oil pressure indicator is ON.
- The PGM-FI indicator is OFF.
- The coolant temperature indicator is OFF.
- The HESD indicator is OFF.
- The immobilizer system (HISS) indicator is OFF.

The low oil pressure indicator should go off 2–3 seconds after the engine starts. If the light stays on, stop the engine immediately and check the engine oil level.

## NOTICE

Operating the engine with insufficient oil pressure can cause serious engine damage.