OPERATION

	LIMITION
oag	e
1	MOTORCYCLE SAFETY
1	IMPORTANT SAFETY
	INFORMATION
2	PROTECTIVE APPAREL
4	LOAD LIMITS AND GUIDELINES
R	PARTS LOCATION
11	INSTRUMENTS AND
11	INDICATORS
	INDICATORS
34	MAJOR COMPONENTS
34	(Information you need to operate
34	
34 34	(Information you need to operate this motorcycle)
34	(Information you need to operate this motorcycle)
34 40	(Information you need to operate this motorcycle) SUSPENSION
34 40 43	(Information you need to operate this motorcycle) SUSPENSION BRAKES
34 40 43 45	(Information you need to operate this motorcycle) SUSPENSION BRAKES CLUTCH
34 40 43 45 47	(Information you need to operate this motorcycle) SUSPENSION BRAKES CLUTCH COOLANT
34 40 43 45 47	(Information you need to operate this motorcycle) SUSPENSION BRAKES CLUTCH COOLANT FUEL ENGINE OIL

page

57 ESSENTIAL INDIVIDUAL COMPONENTS

- 57 IGNITION SWITCH
- 58 KEYS
- 60 IMMOBILIZER SYSTEM (HISS) Except MX, IIMX type
- 63 RIGHT HANDLEBAR CONTROLS
- 64 LEFT HANDLEBAR CONTROLS
- 67 HESD (Honda Electronic Steering Damper)