


Changing the oil filter requires a special oil filter tool and a torque wrench. If you do not have these tools and the necessary skill, we recommend that you have your Honda dealer perform this service.

If a torque wrench is not used for this installation, see your Honda dealer as soon as possible to verify proper assembly.

Change the engine oil with the engine at normal operating temperature and the motorcycle on its side stand to assure complete and rapid draining.

1. Remove the lower cowl (page 81 ).
2. Place a drain pan under the crankcase.
3. To drain the oil, remove the oil filler cap, oil drain bolt (1) and sealing washer (2).

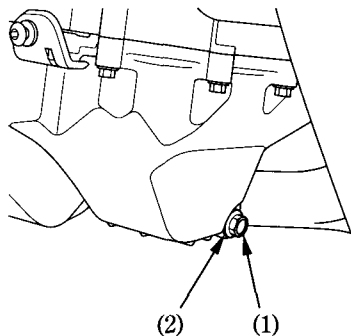

(1) Oil drain bolt

(2) Sealing washer