

To reset the tripmeter:


To reset the tripmeter A (2), average fuel mileage (5), and fuel consumption (6) together, push and hold control button A (4) when either indication is displayed.

When they are reset, "0.0" is displayed at each indication. Then, the display returns to the last selected indication.

To reset the tripmeter B (3), push and hold control button A with the display in the tripmeter B.

Also, after refueling more than the reserve amount, the tripmeter A, average fuel mileage, and fuel consumption can be automatically reset.

You can activate or deactivate the automatic reset mode by refueling (page 33).

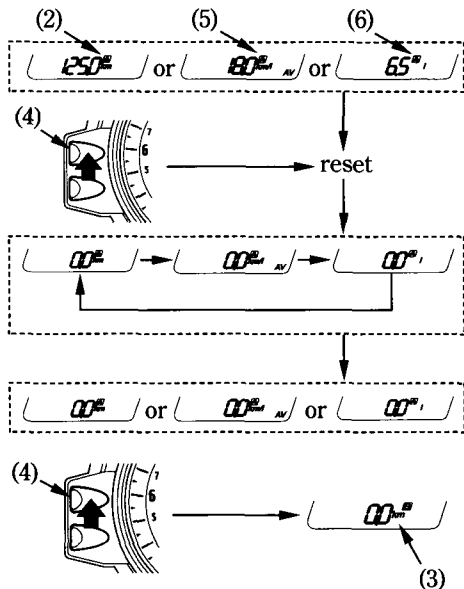

(5) Average fuel mileage

(6) Fuel consumption