


To select the REV indicator indication pattern:

An indication pattern can be selected from the 9 patterns (page 40).

The indication pattern will be set each time you press control button A (1), to select a pattern you like.

To end the setting, press control button B (2).

As you turn off the ignition switch during the presetting procedures, the preset data just before turning off the ignition switch will be registered.

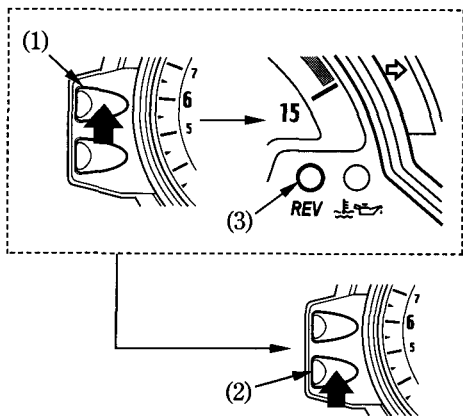

- (1) Control button A
- (2) Control button B
- (3) REV indicator