

### Indication Mode of Fuel Mileage Change

When the speedometer is displayed in “km/h”, either “km/l” or “l/100 km” can be the set unit for current and average fuel mileage.

If the ordinary indication is tripmeter B, fuel consumption or reserve fuel consumption, this function becomes invalid, and returns to the ordinary indication.

< E type only >

This function can be operated after the speed, mileage, and fuel mileage units are selected.

1. < Except E type >

Turn the ignition switch ON, and press and hold control button A (1) and B (2) for more than 2 seconds.

The unit you are setting in the multi-function display starts to blink.


2. Press control button A to select “km/l” or “l/100 km”.

If the ordinary indication is the odometer or tripmeter A, it automatically changes to current or average fuel mileage.

3. To end the selection, press control button B.

The display will stop blinking automatically if the button is not pressed for about 30 seconds.

As you turn off the ignition switch during the presetting procedures, the preset data just before turning off the ignition switch will be registered.

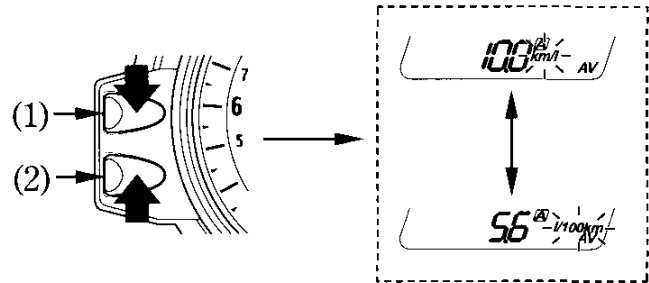

(1) Control button A

(2) Control button B